
 
 





Originale	Sostituto	Originale	Sostituto
 RATIO	 Picture / Format	 VOL+	 Vol+
 POWER	 Power	 MUTE	 Mute / Dimmer
 INPUT	 AV / Input / RDS	 PR+/PAGE UP	 CH+ / Page+
 AV MODE	 Info / Angle	 VOL-	 Vol-
 ENERGY	 Sleep / Timer	 PR-/PAGE	 CH- / Page-
 1	 1	 UP	 Up
 2	 2	 LEFT	 Left
 3	 3	 OK	 OK
 4	 4	 RIGHT	 Right
 5	 5	 MENU	 Menu / Home
 6	 6	 DOWN	 Down
 7	 7	 RETURN	 Back / Return
 8	 8	 RED	 Red / Netflix / Search
 9	 9	 GREEN	 Green / APP / Repeat
 LIST	 Smart / List	 STOP	 Stop / Hold
 0	 0	 YELLOW	 Yellow / YouTube / Repeat
 Q.VIEW	 Display / Media	 PLAY	 Play / Slow

Originale	Sostituto	Originale	Sostituto
 RATIO	 Picture / Format	 VOL+	 Vol+
 POWER	 Power	 MUTE	 Mute / Dimmer
 INPUT	 AV / Input / RDS	 PR+/PAGE UP	 CH+ / Page+
 AV MODE	 Info / Angle	 VOL-	 Vol-
 ENERGY	 Sleep / Timer	 PR-/PAGE	 CH- / Page-
 1	 1	 UP	 Up
 2	 2	 LEFT	 Left
 3	 3	 OK	 OK
 4	 4	 RIGHT	 Right
 5	 5	 MENU	 Menu / Home
 6	 6	 DOWN	 Down
 7	 7	 RETURN	 Back / Return
 8	 8	 RED	 Red / Netflix / Search
 9	 9	 GREEN	 Green / APP / Repeat
 LIST	 Smart / List	 STOP	 Stop / Hold
 0	 0	 YELLOW	 Yellow / YouTube / Repeat
 Q.VIEW	 Display / Media	 PLAY	 Play / Slow



**Originale**
**Sostituto**

	BLUE		Blue / Prime Video / Random
	PAUSE		Pause / Step / Freeze
	TEXT		Text / Goto
	<<		<< / Tune-
	T.OPT		Setup / OPT /
	>>		>> / Tune+
	FAV/MARK		Fav / Marker / PC
	SIMPLINK		Zoom / Size
	Q.MENU		D.Menu / Top

**Originale**
**Sostituto**