



	Originale	Sostituto	Originale	Sostituto
	 Power	 Power	 Return	 Back
	 AV/Input	 AV	 Marker	 3D
	 Open/Close	 Eject	 Rec	 Rec
	 DVD	 Sleep	 Stop	 Stop
	 HDD	 D. Menu	 Play	 Play
	 O)))/Audio	 Dual	 Pause/Step	 Pause
	 Display	 Info	 I<< Skip	 I<<
	 Menu/List	 Menu	 Skip >>I	 >>I
	 Title	 List	 << Scan	 <<
	 Up	 Up	 Scan >>	 >>
	 Down	 Down	 Red	 Red
	 Right	 Right	 Green	 Green
	 Left	 Left	 Yellow	 Yellow
	 Enter	 Ok	 Blue	 Blue
	 PR/CH+	 Ch +	 FAV	 Pre Ch
	 PR/CH-	 Ch -	 Repeat	 Shift + Text
	 Home	 Smart	 Text	 Text





	Originale	Sostituto		Sostituto
	Subtitle			Subt
	EPG			Guide
	Timeshift			Options
	Clear			Exit
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	Tv/DVD			TV/R
	Power Tv			Shift + Power
	PR/CH+ Tv			Shift + Ch +

	Originale	Sostituto		Sostituto
	PR/CH- Tv			Shift + Ch -
	Vol+ Tv			Vol +
	Vol- Tv			Vol -
	AV/Inpu TV			Shift + AV

