

 



 
 
 
 
 
 

 


 
 

 

 
 
 
 
 

 

 
 

 











 








Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 Function	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat↔	 Text
 I<< Skip	 I<<
 <<	 <<

Originale	Sostituto
 >>	 >>
 Skip >>I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Speaker Level	 Options
 Sound Effect	 Media
 Optical Tv Sound	 TV/R
 Home	 Smart
 Cinema Sound	 Shift + Dual
 Info	 Info
 Menu	 Menu
 Up	 Up
 Down	 Down



