



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/DVD	 TV/R
 Open/Close	 Eject
 Display	 Info
 Text	 Text
 Rec	 Rec
 [=i]/Zoom	 Format

Originale	Sostituto
 [=+]/Repeat	 Shift + Text
 Scan >>	 >>
 << Scan	 <<
 I<< Skip	 I<<
 >>I Skip	 >>I
 Play	 Play
 Stop	 Stop
 Pause/Step	 Pause
 Menu/List	 Menu
 [=]	 List
 Home	 Smart
 Guide	 Guide
 Return	 Back
 Red/FAV	 Red
 Green/Audio	 Green
 Yellow/Subtitle	 Yellow
 Blue/Timeshift	 Blue



