

































































 
 











 


























Originale	Sostituto	Originale	Sostituto
Power		Power	
OK		OK	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
Back		Back / Return	
Vol +		Vol+	
Vol -		Vol-	
Home / Smart		Menu / Home	
3D	 +  Shift + 3	Shift + 3	 +  Shift + 3
Mute		Mute / Dimmer	
P +		CH+ / Page+	
P -		CH- / Page-	
Ratio		Picture / Format	
List		Smart / List	
Q.Menu		D.Menu / Top	
Subtitle		Subtitle / EQ	
Settings		Setup / OPT /	
>>		>>I / Preset+	
>>		>> / Tune+	
Play		Play / Slow	
AD / PIP		Sound / Title	
<<		I<< / Preset-	
<<		<< / Tune-	
Rec		Rec / Rec Mode	
Pause		Pause / Step / Freeze	
Text		Text / Goto	
FAV		Fav / Marker / PC	
Exit		Exit / Cancel / Clear	
Input		AV / Input / RDS	
Blue		Blue / Prime Video / Random	
Yellow		Yellow / YouTube / Repeat	
Stop / Live TV		Stop / Hold	



Originale	Sostituto	
AV Mode	 +  Shift + AV / Input / RDS	
Green	 Green / APP / Repeat	
Red	 Red / Netflix / Search	
0	 0	
AD	 Audio / Lang I/II	
TV / PC	 +  Shift + Fav / Marker / PC	
Search	 +  Shift + Red / Netflix /	
App	 +  Shift + Green / APP /	
TV / Radio	 TV/Radio /	
Guide	 Guide / EPG / -/--	
Info	 Info / Angle	
Recent	 Sleep / Timer	
9	 9	
8	 8	
7	 7	
Live Menu	 Display / Media	
6	 6	

Originale	Sostituto	
5	 5	
Q.View	 +  Shift + Display / Media	
4	 4	
Live Zoom	 Zoom / Size	
3	 3	
2	 2	
1	 1	
T.Opt	 +  Shift + Setup / OPT / Tools	
Energy Saving	 Eject / Surround	
My APPS	 +  Shift + Smart / List	

