








Originale	Sostituto	Originale	Sostituto
Power		Power	EQ SUBTITLE
OK		Subtitle	Subtitle / EQ
Up		Settings	Setup / OPT /
Down		>>	PRESET+ >>I / Preset+
Right		>>	TUNE+ >> / Tune+
Left		Play	SLOW Play / Slow
Back		AD / PIP	TITLE SOUND
Vol +		<<	PRESET- I<< / Preset-
Vol -		<<	TUNE- << / Tune-
Home / Smart		Rec	REC MODE Rec / Rec Mode
3D	 +  Shift + 3	Pause	STEP-FREEZE Pause / Step / Freeze
Mute		Text	GOTO TEXT Text / Goto
P +		FAV	PC FAV MARKER Fav / Marker / PC
P -		Exit	CLEAR EXIT Exit / Cancel / Clear
Ratio		Input	RDS AV INPUT AV / Input / RDS
List		Blue	Prime Video RANDOM Blue / Prime Video / Random
Q.Menu		Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
		Stop / Live TV	HOLD Stop / Hold



Originale	Sostituto	Originale	Sostituto
AV Mode	 +  Shift + AV / Input / RDS	5	 5
Green	 Green / APP / Repeat	Q.View	 +  Shift + Display / Media
Red	 Red / Netflix / Search	4	 4
0	 0	Live Zoom	 Zoom / Size
AD	 Audio / Lang I/II	3	 3
TV / PC	 +  Shift + Fav / Marker / PC	2	 2
Search	 +  Shift + Red / Netflix /	1	 1
App	 +  Shift + Green / APP /	T.Opt	 +  Shift + Setup / OPT / Tools
TV / Radio	 TV/Radio /	Energy Saving	 Eject / Surround
Guide	 Guide / EPG / -/--	My APPS	 +  Shift + Smart / List
Info	 Info / Angle		
Recent	 Sleep / Timer		
9	 9		
8	 8		
7	 7		
Live Menu	 Display / Media		
6	 6		

