



 

 
 


 



 

 

 







 

 

 







Originale	Sostituto
 Power	 Power
 Tv/Rad	 TV/Radio /
 Subtitle	 Subtitle / EQ
 AD	 Audio / Lang I/II
 Ratio	 Picture / Format
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Originale	Sostituto
 Q.View	 Display / Media
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/--
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Info	 Info / Angle
 T.Opt.	 Setup / OPT /
 Settings	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Originale		Sostituto	
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	AV Mode	+	Shift + AV / Input / RDS
	AV Mode		Eject / Surround
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originale		Sostituto	

