

 





 

 
 
 
 

 
 




Originale	Sostituto
 Power	 Power
 Tv/Radio	 TV/R
 Input	 AV
 Q.Menu	 Menu
 []/Ratio	 Format
 Subtitle	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide

Originale	Sostituto
 Q.View	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 FAV	 Pre Ch
 Info	 Info
 Page+	 Ch +
 Page-	 Ch -
 APP/*	 Media
 Home	 Smart
 My APPS	 Shift + Media
 Text	 Text
 T.Opt	 Options
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down



