


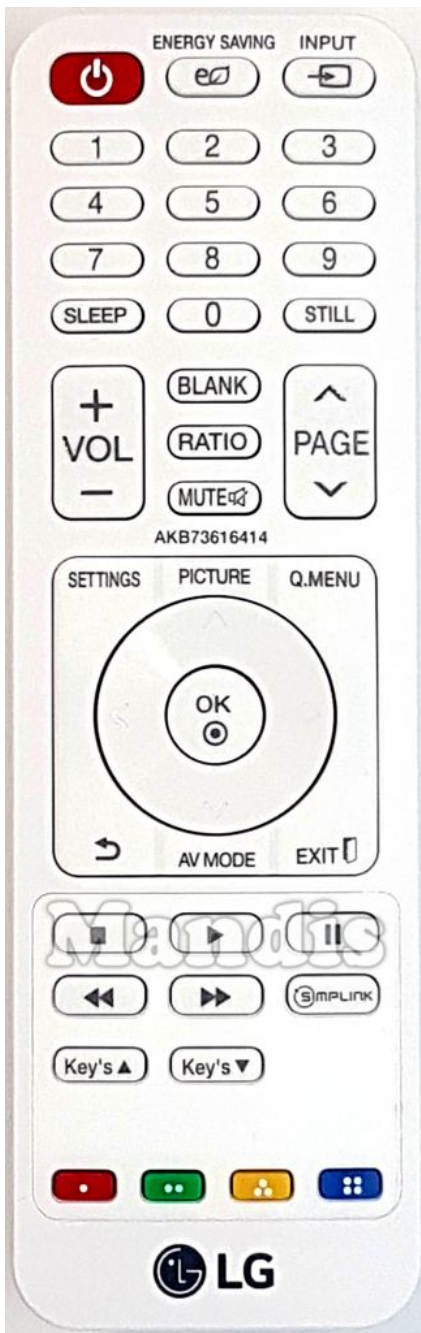

Originale	Sostituto
Power	Power
Energy Saving	3D
Input	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Sleep	Sleep
Still	Pre Ch
Vol+	Vol +
Vol-	Vol -

Originale	Sostituto
Blank	Subt
Ratio	Smart
Mute	Mute
Page Up	Ch +
Page Down	Ch -
Settings	Options
Picture	Format
Q.Menu	D. Menu
Back	Back
AV Mode	TV/R
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Stop	Stop





Originale		Sostituto		Originale	Sostituto
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	Simplink		Media		
	Key's Up		>>		
	Key's Down		<<<		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

