



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
Tv/PVR	TV/Radio /
Vol-	Vol-
Vol+	Vol+
Av Input Tv	AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	Shift + CH- /
7	7
8	8
9	9

Originale	Sostituto
Vol+ Tv	Shift + Vol+
Rec	Rec / Rec Mode
0	0
Timeshift	Setup / OPT /
Vol- Tv	Shift + Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Guide	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK





Originale	Sostituto
	Right
	Back / Return
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Shift + Down
	Shift + Up
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Fav / Marker / PC
	Audio / Lang I/II
	Subtitle / EQ
	Sleep / Timer

Originale	Sostituto
	Text / Goto
	Shift + Text / Text /
	Picture / Format

