


 





 



 

 

 



















 







 



 



 

 

 



 

 








Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Q.View	 D. Menu
 Tv/Rad	 TV/R	 Vol+	 Vol +
 Subtitle	 Subt	 Vol-	 Vol -
 AD/PIP/*	 Dual	 Mute	 Mute
 Tv/PC	 Media	 FAV	 Pre Ch
 Input	 AV	 Guide	 Guide
 1	 1	 P+	 Ch +
 2	 2	 P-	 Ch -
 3	 3	 Text	 Text
 4	 4	 Info	 Info
 5	 5	 T.Opt	 Shift + Options
 6	 6	 Q.Menu	 Menu
 7	 7	 Back	 Back
 8	 8	 Settings	 Options
 9	 9	 Exit	 Exit
 0	 0	 Up	 Up
 List	 List	 Down	 Down

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 FF	 FF
 RR	 RR	 Left	 Left
 Right	 Right	 SOUND	 AD
 SETTINGS	 SETTINGS	 LIST	 SUBT
 DUAL	 DUAL	 OPT	 OPT
 PROG	 PROG	 ECO	 ECO
 SLEEP	 SLEEP	 3D	 3D
 E-MANUAL D.MENU	 E-MANUAL D.MENU	 TIMER	 TIMER
 REPEAT	 REPEAT	 AV	 AV
 ZOOM	 ZOOM	 TOP MENU	 TOP MENU
 TEXT	 TEXT	 DISPLAY INFO	 DISPLAY INFO
 Up	 Up	 MENU	 MENU
 Down	 Down	 OK	 OK
 Left	 Left	 CLEAR	 CLEAR
 Right	 Right	 EXIT	 EXIT
 HOME	 HOME	 RETURN	 RETURN
 SMART	 SMART	 BACK	 BACK
 APP	 APP	 HOME	 HOME
 MEDIA	 MEDIA	 SMART	 SMART
 + CH	 + CH	 APP	 APP
 - CH	 - CH	 MEDIA	 MEDIA
 1	 1	 + CH	 + CH
 2	 2	 - CH	 - CH
 3	 3	 TEXT	 TEXT
 4	 4	 REPEAT	 REPEAT
 5	 5	 DISPLAY INFO	 DISPLAY INFO
 6	 6	 T.OPT	 T.OPT
 7	 7	 Q.MENU	 Q.MENU
 8	 8	 BACK	 BACK
 9	 9	 SETTINGS	 SETTINGS
 0	 0	 EXIT	 EXIT
LIST	LIST	 Up	 Up
		Down	Down



