







Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 Tv/AV	 AV / Input / RDS
 Timer Prog	 TV/Radio /
 Clear/Reset	 Exit / Cancel / Clear
 Menu	 Menu / Home

Originale	Sostituto
 OK	 OK
 Left	 Left
 Vol-	 Vol-
 Up	 Up
 PR+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+
 PR-	 CH- / Page-
 Down	 Down
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Pause/Still	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec/ITR	 Rec / Rec Mode
 Sleep	 Sleep / Timer
 System	 D.Menu / Top





Originale	Sostituto
 Q.View	 Display / Media
 Auto TRK	 Subtitle / EQ
 TRK-	 I<< / Preset-
 TRK+	 >>I / Preset+
 Clock/Count	 Smart / List
 SP/LP	 Setup / OPT /
 [≡/]	 Shift + Text /
 [≡o]	 Shift + << /
 [≡?]	 Shift + Pause / Step /
 Text	 Text / Goto
 [≡♦]	 Zoom / Size
 [≡+]	 Shift + Stop /
 [≡x]	 Shift + >> /
 [≡i]	 Shift + Play /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random

