
 
 
 
 

 
 

 
 
 
 
 

 



 
 
 

 

 
 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		AV Mute		Blank / Mute
	Image		Help / Info				
	Reset		3D / Invert				
	S-Video		Mode				
	RGB		Eco / Aspect				
	Freeze		Freeze / Timer				
	D.Zoom		+ / Play				
	Video		Comp / Video				
	Keystone Up		Up				
	Keystone Down		Down				
	Right/Source		Right				
	Left/Auto		Left				
	OK		Enter				
	Menu		Menu				
	Input Search		Source				
	Vol+		Vol + / Page +				
	Vol-		Vol - / Page -				

