








Originale	Sostituto
	 Power
	 Subtitle / EQ
	 Audio / Lang I/II
	 Eject / Surround
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 Sleep / Timer
	 Green / APP / Repeat
	 Up
	 Menu / Home
	 Info / Angle
	 << / Tune-
	 I<< / Preset-

Originale	Sostituto
	 Left
	 Stop / Hold
	 OK
	 >> / Tune+
	 >>I / Preset+
	 Right
	 TV/Radio /
	 Play / Slow
	 Pause / Step / Freeze
	 Down
	 Rec / Rec Mode
	 D.Menu / Top
	 Shift + Sleep / Timer
	 Display / Media
	 Setup / OPT /
	 1
	 2





Originale		Sostituto	
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originale		Sostituto	

