



 













Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+

Originale	Sostituto
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Menu	 D.Menu / Top
 Title	 Sound / Title
 Up	 Up
 Enter	 OK
 Down	 Down
 Right	 Right
 Left	 Left
 Return	 Back / Return
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Setup	 Setup / OPT /
 Marker	 Fav / Marker / PC





Originale	Sostituto
SEARCH Search	NETFLIX Red / Netflix / SEARCH Search
PROGRAM Program	SHIFT + PROGRAM TV/RADIO Shift + TV/Radio / Program
ZOOM Zoom	SIZE ZOOM Zoom / Size
REPEAT Repeat	APP Green / APP / Repeat
A-B A-B	YouTube Yellow / YouTube / REPEAT A-B Repeat
RESOLUTION Resolution	PROGRAM TV/RADIO TV/Radio /
* *	Prime Video Blue / Prime Video / RANDOM Random
TV POWER Power Tv	SHIFT + TV POWER Shift + Power
AV AV Tv	RDS AV INPUT AV / Input / RDS
PR/CH+ Tv	CH PAGE CH+ / Page+
PR/CH- Tv	CH PAGE CH- / Page-
VOL+ Tv	VOL+ Vol+
VOL- Tv	VOL- Vol-

Originale	Sostituto

