



Originale	Sostituto
Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit / Cancel / Clear
<<<	<<< / Tune-
>>>	>>> / Tune+
<<<	<<< / Preset-
>>>	>>>  / Preset+

Originale	Sostituto
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
DVD Menu	D.Menu / Top
Title	Sound / Title
Up	Up
Enter	OK
Down	Down
Right	Right
Left	Left
Return	Back / Return
Display	Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Setup	Setup / OPT /
Marker	Fav / Marker / PC





Originale	Sostituto
Search	Red / Netflix / Search
Program	Shift + TV/Radio / Program
Zoom	Zoom / Size
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Resolution	TV/Radio /
Karaoke ECHO	Blue / Prime Video / Random
Power Tv	Shift + Power
AV Tv	AV / Input / RDS
PR/CH+ Tv	CH+ / Page+
PR/CH- Tv	CH- / Page-
Vol+ Tv	Vol+
Vol- Tv	Vol-

Originale	Sostituto

