



Originale	Sostituto
Power	Power
Open/Close	Eject / Surround
Power Tv	+ Shift + Power
1	1
2	2
3	3
PR/CH+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/CH- Tv	CH- / Page-
7	7
8	8
9	9
Vol+ Tv	Vol+
Clear	Exit / Cancel / Clear
0	0

Originale	Sostituto
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
>>	>> / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
Info/Display	Info / Angle
Right	Right
Enter	OK
Left	Left
Back	Back / Return
Down	Down





	Originale	Sostituto	Originale	Sostituto
	Disc Menu	 D.Menu / Top		
	Zoom	 Zoom / Size		
	Marker	 Fav / Marker / PC		
	Search	 Shift + Red / Netflix /		
	Title/Pop-Up	 TV/Radio /		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Repeat	 Shift + Green / APP /		
	O))/Audio	 Audio / Lang I/II		
	[...]/Subtitle	 Subtitle / EQ		
	Tv Mute	 Mute / Dimmer		

