






Originale	Sostituto
Power	Power
Open / Close	Eject / Surround
Band	Smart / List
Band	Shift + 6
DVD	Shift + 2
Aux	Shift + 7
USB	Shift + 8
1	1
2	2
3	3
Virtual	D.Menu / Top
4	4
5	5
6	6
7	7
8	8
9	9

Originale	Sostituto
0	0
XTS Pro	Picture / Format
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Audio	Audio / Lang I/II
Sound	Sound / Title
Subtitle	Subtitle / EQ
Return	Back / Return
Setup	Setup / OPT /
Up / Preset +	Up
Up / Preset +	Shift + >>I / Preset+
Display	Display / Media
Left / Tun -	Left
Left / Tun -	Shift + << /
Enter	OK
Right / Tun +	Right
Right / Tun +	Shift + >> / Tune+





Originale	Sostituto
 Menu	 Menu / Home
 Down / Preset -	 Down
 Down / Preset -	 Shift + I<< / Preset-
 Title	 Shift + Sound / Title
 << Scan -	 << / Tune-
 >> Scan +	 >> / Tune+
 Play	 Play / Slow
 Volume +	 Vol+
 I<< / Skip-	 I<< / Preset-
 >>I / Skip+	 >>I / Preset+
 Pause / Step	 Pause / Step / Freeze
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Volume -	 Vol-
 Prog / Memo.	 TV/Radio /
 Clear	 Exit / Cancel / Clear

Originale	Sostituto
 Zoom	 Zoom / Size
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 RDS / Resol.	 CH+ / Page+
 PTY / HDMI	 CH- / Page-
 Dimmer	 Shift + Mute / Dimmer
 Tv Channel+	 Shift + CH+ /
 Tv Vol+	 Shift + Vol+
 Tv Mute	 Shift + Smart / List
 Power Tv	 Shift + Power
 Tv Channel-	 Shift + CH- /
 Tv Vol-	 Shift + Vol-
 Tv Input	 Shift + AV / Input / RDS

