 

 



 

 

 





 

 

 

 

 



 

 


 
 

 





 





 





 



 













Originale	Sostituto
 Power	 Power
 Open/Close	 Eject / Surround
 Function	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0
 Repeat	 Shift + Green / APP /
 I<<	 I<< / Preset-
 <<	 << / Tune-

Originale	Sostituto
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Speaker Level	 TV/Radio /
 Vol+	 Vol+
 Optical / Tv Sound	 Setup / OPT /
 Sound Effect	 Sound / Title
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Home	 Menu / Home
 3D Sound	 Zoom / Size
 Info/Menu	 Info / Angle
 Up/Preset+	 Up
 Left/Tuning-	 Left
 Enter	 OK





Originale	Sostituto
Right/Tuning+	Right
Down/Presets-	Down
Back	Back / Return
Title/Pop Up	Picture / Format
Disc Menu	D.Menu / Top
Red/RDS	Red / Netflix / Search
Green/PTY	Green / APP / Repeat
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Sleep	Sleep / Timer
Music ID	Text / Goto
*	Display / Media
Power Tv	Shift + Power
Volum+ Tv	Shift + Vol+
PR/CH+ Tv	CH+ / Page+

Originale	Sostituto
AV Input Tv	AV / Input / RDS
Volum- Tv	Shift + Vol-
PR/CH- Tv	CH- / Page-

