 









 




 



 



























 




 
 

 







 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Open/Close		Eject / Surround		Title		Shift + Sound / Title
	Home		Shift + Menu /		Marker		Fav / Marker / PC
	FM/AM		Shift + 6		Search		Red / Netflix / Search
	AV		AV / Input / RDS		Zoom		Zoom / Size
	PIP		Picture / Format		Audio/Mo./St.		Audio / Lang I/II
	1		1		Sound		Sound / Title
	2		2		XTS Pro		Shift + Audio / Lang I/II
	3		3		Level/Delay		Smart / List
	Test Tone		Text / Goto		Menu/List		Menu / Home
	4		4		PR/Preset+		CH+ / Page+
	5		5		Up		Up
	6		6		Setup		Setup / OPT /
	[...]/Subtitle		Subtitle / EQ		Left/Tun-		Left
	7		7		Memory/Enter		OK
	8		8		Right/Tun+		Right
	9		9		Display		Display / Media





Originale	Sostituto
PR/Presets-	CH- / Page-
Down	Down
Return	Back / Return
I<</Skip-	I<< / Preset-
>>I/Skip+	>>I / Preset+
Vol+	Vol+
<</Scan-	<< / Tune-
>>/Scan+	>> / Tune+
Vol-	Vol-
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Timer Rec	Sleep / Timer
Mute	Mute / Dimmer
Dubbing	Blue / Prime Video / Random

Originale	Sostituto
CHP ADD	Shift + Fav / Marker / PC
Repeat	Green / APP / Repeat
Repeat A/B	Yellow / YouTube / Repeat
Thumbnail	Shift + Guide / EPG / -/--
Timeshift	Info / Angle
Instant Skip	Guide / EPG / -/--
Clear	Exit / Cancel / Clear
RDS/Resolution	Shift + AV / Input / RDS
PTY	D.Menu / Top
ShowView	Shift + Smart / List
Tv/DVD	TV/Radio /

