



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
DVD	Shift + 2
VCR	Shift + 4
Eject/Open-Close	Eject / Surround
AV/Input Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	Shift + CH- /
7	7
8	8
9	9

Originale	Sostituto
Vol+ Tv	Vol+
Clear	Exit / Cancel / Clear
0	0
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
PR/CH/TRK+	CH+ / Page+
Disc Menu/List	D.Menu / Top
Disc Menu/List	Smart / List





Originale	Sostituto
Left	Left
Enter	OK
Right	Right
Display	Display / Media
PR/CH/TRK-	CH- / Page-
Down	Down
Return	Back / Return
O)/Audio	Audio / Lang I/II
[...] / Subtitle	Subtitle / EQ
Zoom	Zoom / Size
I.Skip	Sleep / Timer
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Dubbing	Info / Angle
Title	Sound / Title
Play Mode	Setup / OPT /
Marker	Fav / Marker / PC

Originale	Sostituto
Search	Red / Netflix / Search
Thumbnail	Picture / Format
CHP.ADD	Text / Goto
TV/VCR	TV/Radio /
Timeshift	Shift + Sleep / Timer
Showview	Guide / EPG / -/--

