



































Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	TV	 Smart / List
Zoom	 Zoom / Size	CH/Page+	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
TV	 TV/Radio /	Display	 Display / Media
Opt?	 Setup / OPT /	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1
TV/SAT	 AV / Input / RDS	2abc	 2
Menu	 Menu / Home	3def	 3
Menu Up	 Up	4ghi	 4
Info	 Info / Angle	5jkl	 5
Menu Left	 Left	6mno	 6
OK Enter	 OK	7pqrm	 7
Menu Right	 Right	8tuv	 8
Exit	 Exit / Cancel / Clear	9wxyz	 9



Originale	Sostituto	Originale	Sostituto
Guide Pilote	Guide / EPG / -/--		
0/10	0		
FAV Pref.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
TV	Shift + 1		
Epg	Shift + Guide / EPG / -/--		

Originale	Sostituto

