 

 
 
 
 
 
 


 
 
 
 
 





 

 

 


 

 
 




 



 


 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 SUB/MP3	 Subt
 Open/Close	 Eject	 EPG/Program	 Guide
 DVB/DVD	 Smart	 Setup	 Options
 Audio	 Dual	 Enter	 Ok
 Clear/Media	 Media	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Red	 Red
 5	 5	 Green	 Green
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 I>/Step	 Pause
 PBC/Menu	 Menu	 Stop/Rec	 Stop
 10+	 Pre Ch	 Play/Pause	 Play

Originale	Sostituto	Originale	Sostituto
 SUB/MP3	 Subt	 AD	 Guide
 EPG/Program	 Options	 Enter	 Ok
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 Red	 Red	 Green	 Green
 Yellow	 Yellow	 Blue	 Blue
 CH+	 Ch +	 CH-	 Ch -
 I>/Step	 Pause	 Stop/Rec	 Stop
 Play/Pause	 Play		





Originale	Sostituto
	
<<	<<
	
>>	>>
	
I<<	I<<
	
>>I	>>I
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute
	
TXT/Repeat	Text
	
Display	Info
	 +  Shift + TV/R
Search/Scan	Shift + TV/R
	
A-B/Tv/R	TV/R
	
Digest/HD/Res.	AV
	
Return	Back
	 +  Shift + Eject
Zoom	Shift + Eject
	
V-Mode	Format
	
N/P	D. Menu
	
Slow	Exit

Originale	Sostituto
	
Angle	3D
	
Title	List

