



 



 



 


 
 



 

 

 

 









 

 

 






 
 


 
 


 
 
 


 


 






 

 

 
 

 


 

 


 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 FAV/List	 Dual
 Recall	 Pre Ch	 Freeze	 Options
 Source	 AV	 Tv/Radio	 TV/R
 Menu	 Menu	 Rec	 Rec
 P.Mode	 Shift + Format	 Red	 Red
 S.Mode	 Shift + Dual	 Green	 Green

Originale	Sostituto	Originale	Sostituto
 Exit	 Exit	 Display	 Shift + Info
 Enter	 Ok	 Up	 Up
 Down	 Down	 Left	 Left
 Right	 Right	 Vol+	 Vol +
 Vol-	 Vol -	 CH+	 Ch +
 CH-	 Ch -	 FAV/List	 Dual
 Freeze	 Options	 Tv/Radio	 TV/R
 Rec	 Rec	 Red	 Red
 Green	 Green		





Originale		Sostituto	
	Yellow		Yellow
	Cyan		Blue
	<</Guide		<<
	>>/Aspect		>>
	<</Cancel	 + 	Shift + Subt
	>>/Sub.Pg		Back
	Stop/Index		Stop
	Play/Pause/Time Shift		Play
	Subtitle		Subt
	Text		Text
	Reveal	 + 	Shift + Options
	Size		Format
	Hold		Eject
	DTV/ATV		Info
	Rec List		D. Menu
	Sleep		Sleep
	MTS	 + 	Shift + Sleep

Originale	Sostituto

