 









 

 







 

 

 



 



 
 


 



 



 










 
 















 




 

 





 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Prog		Shift + TV/Radio / Program
	1		1		CH-		CH- / Page-
	2		2		Aspect		Shift + Picture / Format
	3		3		S.Mode		Sound / Title
	4		4		P.Mode		Picture / Format
	5		5		Guide/Title		Guide / EPG / -/-
	6		6		Guide/Title		Shift + Sound / Title
	7		7		Menu		Menu / Home
	8		8		Up		Up
	9		9		Input		AV / Input / RDS
	List		Smart / List		Left		Left
	0		0		OK		OK
	Recall		Back / Return		Right		Right
	Vol+		Vol+		Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer		Down		Down
	CH+		CH+ / Page+		Exit		Exit / Cancel / Clear





Originale	Sostituto
	 Info / Angle
	 Fav / Marker / PC
	 Setup / OPT /
	 Shift + Info / Angle
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 D.Menu / Top
	 Shift + Up
	 Display / Media
	 Zoom / Size
	 Rec / Rec Mode
	 Shift + Left
	 Shift + Exit / Cancel / Clear
	 Shift + OK
	 Shift + Right
	 Shift + Zoom / Size

Originale	Sostituto
	 Stop / Hold
	 Eject / Surround
	 Shift + Down
	 Play / Slow
	 Pause / Step / Freeze
	 I<< / Preset-
	 Shift + Stop /
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Shift + Text /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Shift + Play /
	 Shift + Green / APP /
	 Yellow / YouTube / Repeat
	 Shift + Yellow / YouTube / Repeat



