 

 

 

 

 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
 

 

 

 
 
 





Originale	Sostituto
 Power	 Power
 Eject / Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 - / - -	 Shift + Guide
 Recall	 Pre Ch
 Vol +	 Vol +
 Vol -	 Vol -

Originale	Sostituto
 Aspect	 For nat
 Audi o	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Di spl ay	 I nf o
 Up	 Up
 Ri ght	 Ri ght
 Down	 Down
 Lef t	 Lef t
 OK	 Ok
 LCD Menu	 Menu
 DVD Set up/ Exi t	 Exi t
 DVD Set up/ Exi t	 Opt i ons
 I nput	 AV
 P. Mobe	 Shi ft + For nat
 S. Mobe	 Shi ft + Dual
 Sl eep	 Sl eep





Originale	Sostituto
FAV	Shift + Pre Ch
FAV-	Shift + Ch -
FAV+	Shift + Ch +
EPG	Gui de
Angl e/ Text	Text
Zoom/ Hol d	Shi ft + Eject
Tv/ Radi o	TV/ R
Got o/ Subpage	3D
D. Di sp/ Reveal	Li st
Subt i t l e	Subt
Ti t l e/ Si ze	Smar t
D. Menu/ I ndex	D. Menu
I > Medi a	Medi a
Pl ay/ Pause	Pl ay
<<<	<<<
Pl ay/ Pause	Pause
>>>	>>>

Originale	Sostituto
Rec	Rec
St op	St op
I <<<	I <<<
>>>	>>>
Red/ Pr og	Red
Green/ I nt r o	Green
Yel l ow Repeat	Yel l ow
Bl ue/ A- B	Bl ue

