
 
 


 



 




 






 

 
 

 

 





 


 

 



 
 


 

 

 




 


 





 
 

 

 


 




Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Media
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7

 
 


 
 
 


Originale	Sostituto	Originale	Sostituto
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Tone+		List	
On/Tim		Options	



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Tone+		List	
On/Tim		Options	

