 
 
 
 





 

 
 
 
 

 
 

 
 







Originale		Sostituto		Originale		Sostituto	
	POWER		Power		GUIDE		Guide
	TV/Radio		TV/R		FAV		Pre Ch
	EXIT		Exit		OK		Ok
	MENU		Menu		UP		Up
	AUDIO		Dual		DOWN		Down
	MUTE		Mute		RIGHT		Right
	TEXT		Text		LEFT		Left
	1		1		VOL+		Vol +
	2		2		VOL-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		SLEEP		Sleep
	6		6		BACK		Back
	7		7		RED		Red
	8		8		GREEN		Green
	9		9		YELLOW		Yellow
	0		0		BLUE		Blue





Originale		Sostituto		Originale		Sostituto	
	↑	 + 	Shift + Ch +		BOOK		Smart
	↓	 + 	Shift + Ch -				
	A - B		I <<				
	STEP		>> I				
	STOP		Stop				
	PAUSE		Pause				
	REC		Rec				
	REW		<<				
	PLAY		Play				
	FWD		>>				
	SUBTITLE		Subt				
	V-FORMAT		Format				
	INFO		Info				
	OPTION		Options				
	PLAYLIST		Media				
	LIST		List				
	TIME		AV				

