

 




 

 
 



 






Originale	Sostituto
 TV/R	 TV/Radio /
 Power	 Power
 Mute	 Mute / Dimmer
 HDMI	 Shift + 0
 Format	 Picture / Format
 Time	 Shift + Sleep / Timer
 F1	 Shift + 1
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 SAT	 Smart / List
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 0	 0
 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Audio / Lang I/II
 Green / Pause	 Green / APP / Repeat
 Green / Pause	 Shift + Pause / Step /
 Yellow / Zoom	 Yellow / YouTube / Repeat
 Yellow / Zoom	 Zoom / Size
 Blue / Info	 Blue / Prime Video / Random
 Blue / Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Right
 Down / CH-	 Down







































Originale	Sostituto
Sub	Subtitle / EQ
Txt	Text / Goto
EPG	Guide / EPG / /-/-
Fav	Fav / Marker / PC
Vol+	Vol+
Find	Shift + Red / Netflix /
Grid	Display / Media
Page+	CH+ / Page+
Vol-	Vol-
Sleep	Sleep / Timer
USB	Shift + 8
Page-	CH- / Page-
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Stop	Stop / Hold
I<<	I<< / Preset-

Originale	Sostituto
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode





























 



Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Menu	 Menu / Home
Mute	 Mute / Dimmer	Menu Up	 Up
H/V Play	 Play / Slow	Info	 Info / Angle
Dec/Pause	 Pause / Step / Freeze	Menu Left	 Left
East	 Rec / Rec Mode	OK Enter	 OK
Lang./Rewind	 << / Tune-	Menu Right	 Right
LNB F.Forward	 >> / Tune+	Exit	 Exit / Cancel / Clear
Dev	 >>I / Preset+	Menu Down	 Down
Audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Zoom	 Zoom / Size	SAT Sky	 Smart / List
Sleep Timer	 Sleep / Timer	CH/Page+	 CH+ / Page+
TV	 TV/Radio /	Volume-	 Vol-
Sys/Serv	 D.Menu / Top	Display	 Display / Media
Opt?	 Setup / OPT /	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1
TV/SAT	 AV / Input / RDS	2abc	 2





Originale	Sostituto	
3def	 3	3
4ghi	 4	4
5jkl	 5	5
6mno	 6	6
7pqrm	 7	7
8tuv	 8	8
9wxyz	 9	9
Guide Pilote	 Guide / EPG / -/--	
0/10	 0	0
FAV Pref.	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
Freeze	 +  Shift + Pause / Step /	
Lang./Rewind	 +  Shift + Audio / Lang I/II	
	 +  Shift + Left	

Originale	Sostituto	
	 +  Shift + Right	
Video	 +  Shift + 4	
Epg	 +  Shift + Guide / EPG / -/--	
App	 +  Shift + Green / APP /	

