

 


 



 




 

 


 








 












 


 
 

 

 




 


 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right / Vol +		Vol +
	SUB-T		Subt		Left / Vol -		Left
	Lang		Dual		Left / Vol -		Vol -
	Mute		Mute		OK		Ok
	EPG		Guide		FAV		Pre Ch
	Goto		Smart		TV / Radio		TV/R
	Page +		Shift + Ch +		Recall		Back
	Page -		Shift + Ch -		Info		Info
	TTX		Text		1		1
	Repeat		Shift + Text		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9





 
 


 

















 


 
 


 
 
 

 


 



 



 





 

 



 











Originale		Sostituto	
	0		0
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause / Timeshift		Pause
	Stop		Stop
	Rec		Rec
	Red / PVR		Red
	Green / V-Format		Green
	Green / V-Format		Format
	Yellow / Aspect		Yellow
	Yellow / Aspect		3D
	Blue / Timer		Blue

Originale		Sostituto	





Originale		Sostituto		Originale		Sostituto	
	Power		Power		OK		Ok
	Mute		Mute		FAV		Pre Ch
	EPG		Guide		TV / Radio		TV/R
	Info		Info		Text		Text
	Audio		Dual		Goto		Smart
	Recall		Back		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		USB		Media
	Left / Vol -		Vol -		Rec		Rec





Originale	Sostituto	Originale	Sostituto
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 <<	 <<		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 ---	 +  Shift + 1		
 ---	 +  Shift + 2		
 ---	 +  Shift + 3		
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		

