




 








 
 

 









 



 

 

 

 

 

 

 

 





 

 
 
 



 
 

 



 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	TV / STB		TV/R		OK		Ok
	Mute		Mute		Right		Right
	1		1		Down		Down
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Menu		Menu
	5		5		Exit		Exit
	6		6		TV Out		Media
	7		7		Guia TV		Guide
	8		8		Video Clube		Smart
	9		9		Stop		Stop
	0		0		Play		Play
	Back / AV		Back		Pause		Pause
	V+		Vol +		Rec		Rec
	V-		Vol -		I<		I<<
	Up		Up		<<		<<<





	Originale	Sostituto	Originale	Sostituto
	>>	>>		
	>	>>		
	Red	A Red		
	Green	B Green		
	Yellow	C Yellow		
	Blue	D Blue		
	Text	REPEAT TEXT Text		
	Record List	DISC NAV LIST List		

