

 
 

 

 


 








 
 


 

 
 
 
 









Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Progr.	 Sleep
Audio Off	 Mute	Return	 Back
Slow Down	 Ch -	Menu Right	 Right
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Blue	Volume+	 Vol +
Title	 List	Prev.	 I<<
Zoom	 Eject	Top Menu	 D. Menu
Pepeat/1/All	 Text	Next	 >>I
Subt.	 Subt	Volume-	 Vol -
Display	 Info	1	 1
Rep/A-B	 +  Shift + Text	2	 2
Menu	 Menu	3	 3
Stop	 Stop	4	 4
Pause	 Pause	Shuffle	 Red
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
OK Enter	 Ok	Syst.Preset	 +  Shift + Options



Originale	Sostituto	Originale	Sostituto
Remain	 Green	+10	 Guide
7	 7	0	 0
Record	 Rec	C/CH	 Pre Ch
Game	 Media	Clear/00:00	 +  Shift + 9
Pbc	 Smart	Digest	 +  Shift + Guide
Np	 Yellow	3D	 3D
Mode	 Options	Audio	 +  Shift + Dual
Rewind	 <<		
F.Forward	 >>		
Timer	 +  Shift + AV		
Angle	 Format		
Video	 AV		
Lang	 Dual		
Random	 TV/R		
Play	 Play		
8	 8		
9	 9		

