



Originale	Sostituto
 Open / Close	 Exit
 X	 Smart
 On/Off	 Power
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 Play	 Play
 >>	 >>
 I<	 I<<
 >I	 >>I
 Display	 Shift + Info
 Title	 3D
 Back	 Back
 DVD Menu	 D. Menu
 Info	 Info
 Up	 Up
 Left	 Left

Originale	Sostituto
 OK	 Ok
 Right	 Right
 Down	 Down
 Y / Yellow / Guide	 Yellow
 Y / Yellow / Guide	 Guide
 X / Blue / CH- / PG-	 Blue
 X / Blue / CH- / PG-	 Ch -
 A / Green / CH PG	 Green
 A / Green / CH PG	 Ch +
 B / Red / Live TV	 Red
 B / Red / Live TV	 TV/R
 Start / Windows	 Media
 Rec	 Rec

