
 
 




 
 




 
 











 



 

Originale	Sostituto
	Power
	Mute
	Nicam/A2
	Aspect
	P.Mode
	S.Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Shift + Audio / Lang I/II
	Shift + Picture / Format
	Picture / Format
	Sound / Title
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0

Originale	Sostituto
	Recall
	Display
	Freeze
	Rec/Auto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	Source
	Left
	Enter
	Right
	Down
	Menu
	Exit
	Back / Return
	Display / Media
	Pause / Step / Freeze
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	AV / Input / RDS
	Left
	OK
	Right
	Down
	Menu / Home
	Exit / Cancel / Clear





Originale	Sostituto
 CH+ CH	 CH+ / Page+ CH PAGE
 Subtitle	 Subtitle / EQ EQ SUBTITLE
 Vol+	 Vol+ VOL +
 CH- CH	 CH- / Page- CH PAGE -
 T.Shift	 Setup / OPT / OPT-TOOLS SETUP
 Vol-	 Vol- VOL -
 Play/Pause/Hold HOLD	 Play / Slow SLOW
 Play/Pause/Hold HOLD	 Shift + Stop / SHIFT + HOLD
 <</Reveal REVEAL	 << / Tune- TUNE-
 >>/Size SIZE	 Zoom / Size SIZE ZOOM
 >>/Size SIZE	 >> / Tune+ TUNE+
 Stop/Index INDEX	 Stop / Hold HOLD
 I<<	 I<< / Preset- PRESET-
 S.Page/>>I	 >>I / Preset+ PRESET+
 Text TEXT	 Text / Goto GOTO TEXT
 FAV	 Fav / Marker / PC PC FAV MARKER
 Audio AUDIO	 Audio / Lang I/II LANG I/II AUDIO

Originale	Sostituto
 DTV	 Smart / List LIST SMART
 EPG	 Guide / EPG / -/- GUIDE EPG
 Tv/Radio TV/RADIO	 TV/Radio / PROGRAM TV/RADIO

