



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
EPG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II

Originale	Sostituto
Display	Display / Media
TV / Radio	TV/Radio /
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
FAV	Fav / Marker / PC
Vol+	Vol+
Auto	Eject / Surround
CH+	CH+ / Page+
Vol-	Vol-
Aspect	Zoom / Size
CH-	CH- / Page-
Source	AV / Input / RDS



