

 


 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Green/Slow		Green
	I<<		I<<		Yellow/Repeat		Yellow
	Eject		Eject		Blue/A-B		Blue
	<<		<<		CH+		Ch +
	>>		>>		CH-		Ch -
	>>		>>		Tv-Menu		Menu
	Play		Play		TV/AV		AV
	Pause		Pause		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	TV/TXT/Langua		Text		DTV		Shift + Smart
	Cancel/Zoom		Shift + Eject		DVD Setup		D. Menu
	Reveal/Subtitle		3D		Exit		Exit
	Hold/Menu		Smart		Display		Shift + Info
	Size/Angle		Format		Up		Up
	Subpage/Title		Options		Down		Down
	Index/Goto		Media		Right		Right
	Red/Program		Red		Left		Left





Originale	Sostituto
OK	Ok
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	+ -/-- Shift + Guide
	RETURN BACK Back
PICTURE	SHIFT + PICTURE FORMAT Shift + Format
SOUND	SHIFT + SOUND DUAL Shift + Dual
NICAM/A2	SOUND DUAL Dual
MUTE	MUTE Mute

Originale	Sostituto
SLEEP	PROG SLEEP Sleep
INFO	DISPLAY INFO Info
SUBTITLE	AD SUBT Subt
CHANNEL LIST	DISC NAV LIST List
EPG	GUIDE Guide
TVRADIO	SEARCH TV/R TV/R
FAV	FAV PRE-CH Pre Ch

