

 

 

 

 









 



 

 



 
 
 
 

 











 

 

 



 







 

 

 



 
 


Originale	Sostituto
 Power	 Power
 Audio I/II	 Dual
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Recall	 Back
 Exit	 Exit
 Menu	 Menu

Originale	Sostituto
 Source	 AV
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 P.Mode	 Format
 S.Mode	 Shift + Dual





Originale		Sostituto		Originale		Sostituto	
	P.Size		Eject				
	Subtitle		Subt				
	Play/Pause / TS		Play				
	Play/Pause / TS		Pause				
	Stop		Stop				
	Rec		Rec				
	Text		Text				
	<< / PVR List		<<				
	<< / PVR List		List				
	>> / DTV/Radio		>>				
	>> / DTV/Radio		TV/R				
	I<< / Fav.CH		I<<				
	I<< / Fav.CH		Pre Ch				
	>>I / Guide		>>I				
	>>I / Guide		Guide				

