










 
 



 












 
 
 

 



 

 







 

 



 


















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 -/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 DISC NAV	 PLAY MODE
 Vol +	 Right	 LIST	 II
 Vol -	 Vol -	 DUAL	 ■
 Vol -	 Left	 SUBT	 ●
 OK	 Ok	 AD	 SETTINGS
 SWAP	 Back	 PICTURE	 ECO
 16:9	 Format	 FORMAT	 3D
 White / i	 Info	 E-MANUAL	 TIMER
 Red	 Red	 REPEAT	 AV
 Green	 Green	 ZOOM	
 Yellow	 Yellow	 TOP MENU	
 Blue	 Blue	 MENU	
 Stop	 Stop	 DISPLAY INFO	
 Reveal	 Smart	 OK	
		 RETURN BACK	
		 EXIT	
		 HOME	
		 SMART	
		 APP	
		 CH +	
		 VOL +	
		 MEDIA	
		 CH -	
		 1	
		 2	
		 3	
		 4	
		 5	
		 6	
		 7	
		 8	
		 9	
		 FAV	
		 GUIDE	
		 0	
		 PRE-CH	
		 A	
		 B	
		 C	
		 D	
			
			



