









 



 


 

 

 

 

 













Originale	Sostituto
 Power	 Power
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Select	 Ok
 M	 Menu
 [i]/Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 Exit/-/--	 Exit
 PP	 Pre Ch
 Swap/P<P	 Smart
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 I-II	 Dual
 Tv/DTV	 TV/R
 AV/Source	 AV
 Red/↑	 Red
 Green/↓	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡]	 Text





Originale		Sostituto	
	[≡+]/[X]	 PICTURE FORMAT	Format
	[≡x]/[■]	 AD SUBT	Subt
	[≡o]	 SETTINGS OPT	Options
	[≡◆]/[+]/Wide	 ECO 3D	3D
	[.≡]/[■]	 RETURN BACK	Back
	[≡?]	 APP MEDIA	Media
	Guide/[≡i]	 -/-- GUIDE	Guide

Originale		Sostituto	

