



 


 

 

 


 
 
 


 
 

 

 
 
 
 

 





 




 


 
 


 










 
 





 

 





Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Right		Right
	Display		Shift + Info		Down		Down
	Nicam / Eject		Eject		Source		AV
	Mute		Mute		Exit		Exit
	P.Mode		Shift + Format		1		1
	S.Mode		Shift + Dual		2		2
	Sleep		Sleep		3		3
	Aspect		Format		4		4
	Vol -		Vol -		5		5
	Vol +		Vol +		6		6
	CH -		Ch -		7		7
	CH +		Ch +		8		8
	LCD-Menu		Menu		9		9
	DVD-Setup		Options		0		0
	Up		Up		Recall		Back
	Left		Left		Text / Audio		Text
	Enter		Ok		Hold / A-B / Rec List		Smart





Originale	Sostituto	Originale	Sostituto
	Rec		Rec
	Time Shift		Media
	Red / Repeat		Red
	Red / Repeat	 + 	Shift + Text
	Green / Zoom		Green
	Green / Zoom	 + 	Shift + Eject
	Yellow / Angle		Yellow
	Blue / Goto		Blue
	Index / I<<		I<<
	Size / Stop		Stop
	Rev. / Play/Pause		Play
	Rev. / Play/Pause		Pause
	Sub.P / >>I		>>I
	TV/Radio / <<		<<
	TV/Radio / <<		TV/R
	Lang / Menu		Dual
	Lang / Menu		D. Menu

Originale	Sostituto
	I> Step
	>>
	Subt
	Guide
	Pre Ch
	Shift + Sleep
	Info

