



| Originale  | Sostituto   |
|--|---|
|  Power    |  Power               |
|  Source   |  AV / Input / RDS    |
|  1        |  1                   |
|  2        |  2                   |
|  3        |  3                   |
|  4        |  4                   |
|  5        |  5                   |
|  6        |  6                   |
|  7        |  7                   |
|  8       |  8                  |
|  9      |  9                 |
|  TV     |  TV/Radio /        |
|  0      |  0                 |
|  Recall |  Fav / Marker / PC |
|  V+     |  Vol+              |
|  Mute   |  Mute / Dimmer     |
|  P+     |  CH+ / Page+       |

| Originale  | Sostituto   |
|--|---|
|  V-             |  Vol-                    |
|  World/Internet |  Smart / List            |
|  P-             |  CH- / Page-             |
|  Menu           |  Menu / Home             |
|  Q.Menu         |  D.Menu / Top            |
|  Up             |  Up                      |
|  Left           |  Left                    |
|  OK             |  OK                      |
|  Right          |  Right                   |
|  Down          |  Down                   |
|  Back         |  Back / Return         |
|  Exit         |  Exit / Cancel / Clear |
|  i            |  Info / Angle          |
|  Music/Camera |  Display / Media       |
|  TV Guide     |  Guide / EPG / -/-     |
|  */O          |  Shift + 1             |
|  */Q          |  Shift + 2             |





|   | Originale | Sostituto  | Originale | Sostituto                   |
|---|-----------|--|-----------|-----------------------------|
|    | [≡]/Text  |  GOTO<br>TEXT               |           | Text / Goto                 |
|    | Red       |  NETFLIX<br>SEARCH          |           | Red / Netflix / Search      |
|    | Green     |  APP<br>REPEAT              |           | Green / APP / Repeat        |
|    | Yellow    |  YouTube<br>REPEAT A-B      |           | Yellow / YouTube / Repeat   |
|    | Blue      |  Prime Video<br>RANDOM      |           | Blue / Prime Video / Random |
|    | Lang      |  LANG I/II<br>AUDIO         |           | Audio / Lang I/II           |
|    | [≡]..     |  TITLE<br>SOUND             |           | Sound / Title               |
|    | [-O-]     |  OPT-TOOLS<br>SETUP         |           | Setup / OPT /               |
|    | <<        |  TUNE-<br>TUNE-             |           | << / Tune-                  |
|    | Pause     |  STEP-FREEZE<br>STEP-FREEZE |           | Pause / Step / Freeze       |
|   | >>        |  TUNE+<br>TUNE+            |           | >> / Tune+                  |
|  | Rec       |  REC MODE<br>REC MODE     |           | Rec / Rec Mode              |
|  | Play      |  SLOW<br>SLOW             |           | Play / Slow                 |
|  | Stop      |  HOLD<br>HOLD             |           | Stop / Hold                 |
|   |           |  |           |                             |
|   |           |  |           |                             |
|   |           |  |           |                             |
|   |           |  |           |                             |

