 


 
 







 











 



 

 



 





 

 

 



 



 

 
 




 









 




 
 


 



 
 




 





Originale		Sostituto		Originale		Sostituto	
	Open/Close		Eject / Surround		Search		Red / Netflix / Search
	Standby		Power		Dimmer		Mute / Dimmer
	Info		Info / Angle		Input Up AMP		CH+ / Page+
	1		1		Power AMP		Shift + Power
	2		2		Mute AMP		Shift + Mute / Dimmer
	3		3		Vol+ AMP		Vol+
	Prog/Direct		TV/Radio /		Input Down		CH- / Page-
	4		4		Vol- AMP		Vol-
	5		5		Top Menu		D.Menu / Top
	6		6		Up		Up
	Clear		Exit / Cancel / Clear		PopUp Menu		Smart / List
	7		7		Left		Left
	8		8		Enter		OK
	9		9		Right		Right
	Call		Text / Goto		Return		Back / Return
	+10		Guide / EPG / -/-		Down		Down
	0		0		Setup		Setup / OPT /



 


 
 







 











 



 

 



 





 

 

 



 



 

 
 




 









Originale	Sostituto	Originale	Sostituto
	Home		Menu / Home
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Camera/Angle		Shift + Info / Angle
	[...]/Subtitle		Subtitle / EQ
	O)/Audio		Audio / Lang I/II
	Option		Shift + Setup / OPT / Tools
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	X/Random		Blue / Prime Video / Random
	Pure		Sound / Title
	Resolution		Zoom / Size

Originale	Sostituto
	Page/DVD A
	Layer/Disc
	ADJ./Picture
	Red
	Green
	Yellow
	Blue
	YouTube
	Netflix
	Widi





Originale		Sostituto		Originale		Sostituto	
	Open/Close		Eject / Surround		Search		Red / Netflix / Search
	Standby		Power		Dimmer		Mute / Dimmer
	Info		Info / Angle		Input Up AMP		CH+ / Page+
	1		1		Power AMP		Shift + Power
	2		2		Mute AMP		Shift + Mute / Dimmer
	3		3		Vol+ AMP		Vol+
	Prog/Direct		TV/Radio /		Input Down		CH- / Page-
	4		4		Vol- AMP		Vol-
	5		5		Top Menu		D.Menu / Top
	6		6		Up		Up
	Clear		Exit / Cancel / Clear		PopUp Menu		Smart / List
	7		7		Left		Left
	8		8		Enter		OK
	9		9		Right		Right
	Call		Text / Goto		Return		Back / Return
	+10		Guide / EPG / -/-		Down		Down
	0		0		Setup		Setup / OPT /





Originale	Sostituto
Home	Menu / Home
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Camera/Angle	Shift + Info / Angle
[...] / Subtitle	Subtitle / EQ
O)) / Audio	Audio / Lang I/II
Option	Shift + Setup / OPT / Tools
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
X/Random	Blue / Prime Video / Random
Pure	Sound / Title
Resolution	Zoom / Size

Originale	Sostituto
Page/DVD A	AV / Input / RDS
Layer/Disc	Display / Media
ADJ./Picture	Picture / Format
Red	Shift + Red / Netflix /
Green	Shift + Green / APP /
Yellow	Shift + Yellow / YouTube /
Blue	Shift + Blue / Prime
YouTube	Shift + 1
Netflix	Shift + 2
Widi	Shift + 3

