

 





 
 


 





 
 
 
 


 
 

 
 








Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV/Audio	 7
 AUX2	 8
 Tuner	 9
 iPod/USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Online Music	 Media
 Phono	 Smart
 Internet/Radio	 TV/R

Originale	Sostituto
 Eco	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Info	 Info
 Option	 Options
 Back	 Back
 Setup	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Tune-	 I<<
 Play	 Play




 




 
 

 






 

 

 



 


 
 






Originale		Sostituto		Originale		Sostituto	
	Pause		Pause				
	Tune+>>I		>>I				
	Smart Select 1		D. Menu				
	Smart Select 2		Text				
	Smart Select 3		Eject				
	Smart Select 4		AV				
	Green/Movie		Green				
	Red/Music		Red				
	Blue/Game		Blue				
	Yellow/Pure		Yellow				





Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV/Audio	 7
 AUX2	 8
 Tuner	 9
 iPod/USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Online Music	 Media
 Phono	 Smart
 Internet Radio	 TV/R

Originale	Sostituto
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 I<</Tune-	 I<<
 Play	 Play
 Pause	 Pause
 Tune+ / >> I	 >> I
 Smart Select 1	 D. Menu
 Smart Select 2	 Text





Originale	Sostituto	Originale	Sostituto
Smart Select 3	 ZOOM		Eject
Smart Select 4	 TIMER AV		AV

