

 





 
 

 





 

 




 




 






Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV/Audio	 7
 AUX2	 8
 Tuner	 9
 USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Internet Radio	 Smart
 CH/Page+	 Ch +

Originale	Sostituto
 CH/Page-	 Ch -
 Eco	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Option	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 Setup	 Menu
 I<</Tune-	 I<<
 Play	 Play
 Pause	 Pause



 



 
 
 
 
 







 
 


 
 
 


 

 






Originale	Sostituto
>>I/Tune+	>>I
Smart Select 1	D. Menu
Smart Select 2	Text
Smart Select 3	Eject
Smart Select 4	AV
Green/Movie	Green
Red/Music	Red
Blue/Game	Blue
Yellow/Pure	Yellow

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 CBL/SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX1	 5
 Media Player	 6
 TV Audio	 7
 AUX2	 8
 Tuner	 9
 USB	 Guide
 CD	 0
 Bluetooth	 Pre Ch
 Internet Radio	 Smart
 CH/Page+	 Ch +

Originale	Sostituto
 CH/Page-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 I<</Tune-	 I<<
 Play	 Play
 Pause	 Pause
 >>I/Tune+	 >>I
 Smart Select 1	 D. Menu
 Smart Select 2	 Text
Smart Select 3	Eject



