 







 

 
 


 

 

 
 



 



 

 

 
 
 



 
 






 
 




 

 












Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Eco		3D
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Info		Info
	AUX1		5		Option		Options
	Media Player		6		Back		Back
	TV Audio		7		Setup		Menu
	AUX2		8		Up		Up
	Tuner		9		Down		Down
	iPod/USB		Guide		Right		Right
	CD		0		Left		Left
	Bluetooth		Pre Ch		Enter		Ok
	Online Music		Smart		I<</Tune-		I<<
	Internet Radio		Media		Play		Play
	CH/Page+		Ch +		Pause		Pause


 
 
 
 
 
 



 









	Originale	Sostituto		Originale	Sostituto
	>> /Tune+	>>			
	Smart Select 1	+ Shift + 1			
	Smart Select 2	+ Shift + 2			
	Smart Select 3	+ Shift + 3			
	Smart Select 4	+ Shift + 4			
	Green/Movie	Green			
	Red/Music	Red			
	Blue/Game	Blue			
	Yellow/Pure	Yellow			





 

 
Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Vol+		Vol +
	CBL/SAT		1		Vol-		Vol -
	DVD		2		Mute		Mute
	Blu-ray		3		Back		Back
	Game		4		Up		Up
	AUX1		5		Down		Down
	Media Player		6		Right		Right
	TV Audio		7		Left		Left
	AUX2		8		Enter		Ok
	Tuner		9		I<</Tune-		I<<
	iPod/USB		Guide		>>I/Tune+		>>I
	CD		0		Play		Play
	Bluetooth		Pre Ch		Pause		Pause
	Online Music		Smart		Smart Select 1		Shift + 1
	Internet Radio		Media		Smart Select 2		Shift + 2
	CH/Page+		Ch +		Smart Select 3		Shift + 3





Originale

Sostituto

	Smart Select 4	 + 	Shift + 4

Originale

Sostituto

