

 
 



| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  CBL/SAT |  Shift + 1 |
|  DVD |  Shift + 2 |
|  Tv Audio |  Dual |
|  Blu-ray |  Shift + 3 |
|  AUX1 |  Shift + 4 |
|  Tuner |  Shift + 5 |
|  Bluetooth |  Shift + 6 |
|  Game |  Shift + 7 |
|  AUX2 |  Shift + 8 |
|  Phono |  Shift + 9 |
|  USB |  Pre Ch |
|  Media Player |  Media |
|  CD |  Guide |
|  Heos |  Shift + 0 |
|  Internet Radio |  TV/R |
|  CH/Page+ |  Ch + |

| Originale | Sostituto |
|--|---|
|  CH/Page- |  Ch - |
|  Sleep |  Sleep |
|  Eco |  3D |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Info |  Info |
|  Option |  Options |
|  Back |  Back |
|  Setup |  Menu |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Home |  Smart |
|  Stop |  Stop |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|----------------|---|---------|---|---|---|---|
|  | Pause |  | Pause |  | 4 |  | 4 |
|  | Play |  | Play |  | 5 |  | 5 |
|  | I<</Tune- |  | I<< |  | 6 |  | 6 |
|  | >>I/Tune+ |  | >>I |  | 7 |  | 7 |
|  | << |  | << |  | 8 |  | 8 |
|  | >> |  | >> |  | 9 |  | 9 |
|  | Smart Select 1 |  | D. Menu |  | 0 |  | 0 |
|  | Smart Select 2 |  | Text | | | | |
|  | Smart Select 3 |  | Eject | | | | |
|  | Smart Select 4 |  | AV | | | | |
|  | Green/Movie |  | Green | | | | |
|  | Red/Music |  | Red | | | | |
|  | Blue/Game |  | Blue | | | | |
|  | Yellow/Pure |  | Yellow | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |









 


 
 



| Originale | Sostituto |
|--|---|
|  Power |  Power |
|  CBL/SAT |  Shift + 1 |
|  DVD |  Shift + 2 |
|  Tv Audio |  Dual |
|  Blu-ray |  Shift + 3 |
|  AUX1 |  Shift + 4 |
|  Tuner |  Shift + 5 |
|  Bluetooth |  Shift + 6 |
|  Game |  Shift + 7 |
|  AUX2 |  Shift + 8 |
|  Phono |  Shift + 9 |
|  USB |  Pre Ch |
|  Media Player |  Media |
|  CD |  Guide |
|  Internet Radio |  Shift + 0 |
|  Internet Radio |  TV/R |
|  CH/Page+ |  Ch + |

| Originale | Sostituto |
|---|---|
|  CH/Page- |  Ch - |
|  Sleep |  Sleep |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Back |  Back |
|  Home |  Smart |
|  Stop |  Stop |
|  Pause |  Pause |
|  Play |  Play |
|  I<</Tune- |  I<< |
|  >>/Tune+ |  >>I |




 






| Originale | | Sostituto | | Originale | | Sostituto | |
|---|----------------|---|---------|-----------|--|-----------|--|
|  | << |  | << | | | | |
|  | >> |  | >> | | | | |
|  | Smart Select 1 |  | D. Menu | | | | |
|  | Smart Select 2 |  | Text | | | | |
|  | Smart Select 3 |  | Eject | | | | |
|  | Smart Select 4 |  | AV | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |





| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  CBL/SAT |  Shift + 1 |
|  DVD |  Shift + 2 |
|  Tv Audio |  Dual |
|  Blu-ray |  Shift + 3 |
|  AUX1 |  Shift + 4 |
|  Tuner |  Shift + 5 |
|  Bluetooth |  Shift + 6 |
|  Game |  Shift + 7 |
|  AUX2 |  Shift + 8 |
|  Phono |  Shift + 9 |
|  USB |  Pre Ch |
|  Media Player |  Media |
|  CD |  Guide |
|  Internet Radio |  Shift + 0 |
|  Internet Radio |  TV/R |
|  CH/Page+ |  Ch + |

| Originale | Sostituto |
|---|---|
|  CH/Page- |  Ch - |
|  Sleep |  Sleep |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Back |  Back |
|  Home |  Smart |
|  Stop |  Stop |
|  Pause |  Pause |
|  Play |  Play |
|  I<</Tune- |  I<< |
|  >>/Tune+ |  >>I |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|----------------|-----------|---------|-----------|--|-----------|--|
| | << | | << | | | | |
| | >> | | >> | | | | |
| | Smart Select 1 | | D. Menu | | | | |
| | Smart Select 2 | | Text | | | | |
| | Smart Select 3 | | Eject | | | | |
| | Smart Select 4 | | AV | | | | |
| | 1 | | 1 | | | | |
| | 2 | | 2 | | | | |
| | 3 | | 3 | | | | |
| | 4 | | 4 | | | | |
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | 0 | | 0 | | | | |

