



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Pause		Pause
	CH/Page+		Ch +		Stop		Stop
	CH/Page-		Ch -		Home		Smart
	Sleep		Sleep		>> /Tune+		>>
	Mute		Mute		<</Tune-		<<
	Volume+		Vol +		>>		>>
	Volume-		Vol -		<<		<<
	Info		Info		Green/Movie		Green
	Option		Options		Red/Music		Red
	Setup		Menu		Blue/Game		Blue
	Back		Back		Yellow/Pure		Yellow
	Up		Up		1		1
	Enter		Ok		2		2
	Down		Down		3		3
	Right		Right		4		4
	Left		Left		5		5
	Play		Play		6		6




 


 

 
 
 
 
 

 
 


 


 

 
 
 

 
 
 



 









 




Originale	Sostituto
7	7
8	8
9	9
0	0
1	Smart Select 1 REPEAT TEXT
2	Smart Select 2 TIMER AV
3	Smart Select 3 PICTURE FORMAT
4	Smart Select 4 ECO 3D
TV AUDIO	SEARCH TV/R
CBL/SAT	SHIFT + 1
DVD	SHIFT + 2
Blu-ray	SHIFT + 3
AUX1	SHIFT + 4
TUNER	SHIFT + 5
Bluetooth	SHIFT + 6
GAME	SHIFT + 7
PHONO	SHIFT + 9

Originale	Sostituto
AUX2	SHIFT + 8
USB	GUIDE
MEDIA PLAYER	SHIFT + GUIDE
INTERNET RADIO	FAV PRE-CH
CD	SHIFT + 0
Heos (Online)	SHIFT + FAV PRE-CH





	Originale	Sostituto		Originale	Sostituto
	Power		Power		>>
	CH/Page+		Ch +		<<
	CH/Page-		Ch -		>> /Tune+
	Sleep		Sleep		<</Tune-
	Mute		Mute		1
	Volume+		Vol +		2
	Volume-		Vol -		3
	Back		Back		4
	Up		Up		5
	Down		Down		6
	Right		Right		7
	Left		Left		8
	Enter		Ok		9
	Home		Smart		0
	Stop		Stop		Smart Select 1
	Pause		Pause		Smart Select 2
	Play		Play		Smart Select 3
					Text
					AV
					Format





 



 



 

 
 

 

 
 



 



 

 

 



 
 
 
 




 



 
 


 
 

 
 
 


 



 


 




Originale	Sostituto	Originale	Sostituto
Smart Select 4	3D		
TV Audio	TV/R		
Media Player	Shift + Guide		
Internet Radio	Pre Ch		
CBL/SAT	Shift + 1		
DVD	Shift + 2		
Blu-ray	Shift + 3		
AUX1	Shift + 4		
Tuner	Shift + 5		
Bluetooth	Shift + 6		
Game	Shift + 7		
AUX2	Shift + 8		
Phono	Shift + 9		
USB	Guide		
CD	Shift + 0		
Online Music	Shift + Pre Ch		

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		>> /Tune+		>>
	CH/Page+		Ch +		<</Tune-		<<
	CH/Page-		Ch -		<<		<<
	Sleep		Sleep		>>		>>
	Mute		Mute		1		1
	Volume+		Vol +		2		2
	Volume-		Vol -		3		3
	Back		Back		4		4
	Up		Up		5		5
	Down		Down		6		6
	Right		Right		7		7
	Left		Left		8		8
	Enter		Ok		9		9
	Home		Smart		0		0
	Stop		Stop		Smart Select 1		Text
	Pause		Pause		Smart Select 2		AV
	Play		Play		Smart Select 3		Format





Originale	Sostituto
Smart Select 4	3D
TV Audio	TV/R
Media Player	Shift + Guide
Internet Radio	Pre Ch
CBL/SAT	Shift + 1
DVD	Shift + 2
Blu-ray	Shift + 3
AUX1	Shift + 4
Tuner	Shift + 5
Bluetooth	Shift + 6
Game	Shift + 7
AUX2	Shift + 8
Phono	Shift + 9
USB	Guide
CD	Shift + 0
Online Music	Shift + Pre Ch

Originale	Sostituto

