


 













 



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Sleep		Sleep / Timer
	CBL/SAT		Shift + 0		Volume+		Vol+
	DVD		Shift + 2		CH/Page-		CH- / Page-
	TV Audio		Shift + 1		Mute		Mute / Dimmer
	Blu-ray		Shift + 5		Volume-		Vol-
	AUX1		Shift + 7		Eco		D.Menu / Top
	Tuner		Shift + 6		Info		Info / Angle
	Bluetooth		Shift + 9		Up		Up
	Game		Shift + Fav / Marker / PC		Option		Shift + Setup / OPT / Tools
	AUX2		Shift + Guide / EPG / -/-		Left		Left
	Phono		Shift + 4		Right		Right
	USB		Shift + 8		Back		Back / Return
	Media Player		Display / Media		Down		Down
	CD		Shift + 3		Setup		Setup / OPT /
	Online Music		Smart / List		Home		Menu / Home
	Internet Radio		Shift + Smart / List		Stop		Stop / Hold
	CH/Page+		CH+ / Page+		Pause		Pause / Step / Freeze





Originale	Sostituto
 Play	 Play / Slow
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 Shift + I<< /
 >>I/Tune+	 >>I / Preset+
 >>I/Tune+	 Shift + >> /
 <<	 << / Tune-
 >>	 >> / Tune+
 Smart Select 1	 Shift + Red / Netflix /
 Smart Select 2	 Shift + Green / APP /
 Smart Select 3	 Shift + Yellow / YouTube /
 Smart Select 4	 Shift + Blue / Prime
 Green/Movie	 Green / APP / Repeat
 Red/Music	 Red / Netflix / Search
 Blue/Game	 Blue / Prime Video / Random
 Yellow/Pure	 Yellow / YouTube / Repeat
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Enter	 OK



 




 

 





 








 



 

Originale	Sostituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH + / Page+

Originale	Sostituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+







Originale		Sostituto	
	>>/Tune+		Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Red / Netflix / Search
	Smart Select 2		Green / APP / Repeat
	Smart Select 3		Yellow / YouTube / Repeat
	Smart Select 4		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originale		Sostituto	
	Enter		OK





Originale	Sostituto
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH + / Page+

Originale	Sostituto
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+



