



























 



 





































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Down	 Down
 3	 3	 Audio	 Audio / Lang I/II
 4	 4	 Angle	 Info / Angle
 5	 5	 T-C	 Smart / List
 6	 6	 Zoom	 Zoom / Size
 7	 7	 I< / <<	 I<< / Preset-
 8	 8	 I< / <<	 << / Tune-
 9	 9	 Stop	 Stop / Hold
 DVD Menu	 D.Menu / Top	 Play	 Play / Slow
 0	 0	 >I / >>	 >> / Tune+
 OSD / Set Up	 Display / Media	 >I / >>	 >>I / Preset+
 Return	 Back / Return	 Repeat	 Green / APP / Repeat
 Up	 Up	 Repeat A-B	 Yellow / YouTube / Repeat
 OK	 OK	 Pause	 Pause / Step / Freeze
 Left	 Left	 Shuffle	 Blue / Prime Video / Random

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Right	 Right
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Down	 Down
 3	 3	 Audio	 Audio / Lang I/II
 4	 4	 Angle	 Info / Angle
 5	 5	 T-C	 Smart / List
 6	 6	 Zoom	 Zoom / Size
 7	 7	 I< / <<	 I<< / Preset-
 8	 8	 I< / <<	 << / Tune-
 9	 9	 Stop	 Stop / Hold
DVD Menu	D.Menu / Top	Play	Play / Slow
0	0	 >I / >>	 >> / Tune+
 OSD / Set Up	 Display / Media	 >I / >>	 >>I / Preset+
 Return	 Back / Return	 Repeat	 Green / APP / Repeat
 Up	 Up	 Repeat A-B	 Yellow / YouTube / Repeat
 OK	 OK	 Pause	 Pause / Step / Freeze
 Left	 Left	 Shuffle	 Blue / Prime Video / Random

