



Originale	Sostituto
Power	Power
Sleep	Sleep
CBL/SAT	1
DVD	2
Blu-ray	3
Game	4
AUX1	5
Media Player	6
TV Audio	7
AUX2	8
Tuner	9
USB	Guide
CD	0
Bluetooth	Pre Ch
Phono	Shift + Smart
Internet Radio	Media

Originale	Sostituto
CH / Page Up	Ch +
CH / Page Down	Ch -
Eco	3D
Mute	Mute
Vol+	Vol +
Vol-	Vol -
Info	Info
Option	Options
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Back	Back
Setup	Menu
I<</Tune-	I<<
Play	Play





Originale

Sostituto


	Pause		Pause
	>>ITune+		>>I
	Green/Movie		Green
	Smart Select 1		Shift + 1
	Smart Select 2		Shift + 2
	Smart Select 3		Shift + 3
	Smart Select 4		Shift + 4
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow

Originale

Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH / Page Up		Ch +
	Sleep		Sleep		CH / Page Down		Ch -
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Up		Up
	AUX1		5		Left		Left
	Media Player		6		Enter		Ok
	Tv Audio		7		Right		Right
	AUX2		8		Down		Down
	Tuner		9		Back		Back
	USB		Guide		I<</Tune-		I<<
	CD		0		Play		Play
	Bluetooth		Pre Ch		Pause		Pause
	Phono		Smart		>>I/Tune+		>>I
	Internet Radio		Shift + Smart		Smart Select 1		Shift + 1
			Media		Smart Select 2		Shift + 2





Originale		Sostituto	
SELECT 3	Smart Select 3	SHIFT + 3	Shift + 3
4	Smart Select 4	SHIFT + 4	Shift + 4

Originale		Sostituto	

